GETTING STARTED!

Follow these steps to become familiar with your server documentation and to complete your installation successfully.

1 Checking the Accessory Box

The accessory box contains:

- Keys for the **LOCKED** front door**
- **EXPRESSBUILDER bootable CD-ROM** containing the setup utility and system documentation
- **ESMPRO® CD-ROM** containing server management software and documentation
- Customer Notices,* Alerts,* Software Notes,** and System Release Notes
- Network Operating System (NOS) software**
- System Diskettes*
- Application Software**
- Power cord(s), keyboard, and mouse
- Service and Warranty information.

*If required for your server.
**On certain models.

2 Your System Documentation

❑ You may view and print the System User's Guide and EXPRESSBUILDER User's Guide from the **EXPRESSBUILDER** CD-ROM. To do this, insert the CD-ROM into the CD-ROM device on a system running a Microsoft® Windows® Operating System with Internet Explorer 4.01 or later installed. Do not boot from the **EXPRESSBUILDER** CD-ROM. Use Adobe® Acrobat® PDF viewer to view and print the documents. If you do not have Adobe Acrobat PDF viewer, select "Install Adobe Acrobat Reader" on the CD-ROM to install the reader.

❑ Read the System Release Notes. The System Release Notes provide the latest available system information.

❑ Read the Software Notes**. The Software Notes provide information on configuring and running software preloaded on your system.

***Read Appendix C of the User's Guide before installing your operating system.**

**On certain models.

3 Installing Your Server

❑ Follow the Server Setting Up information in your User's Guide to unpack and install your server.

❑ If your server includes Network Operating System software preloaded at the factory, it will boot-up to the operating system license agreement screen. Follow the screen prompts and Software Notes to complete loading of your operating system. Servers that include Network Operating System software preloaded at the factory, include a 10MB (minimum size) maintenance partition.

If your system does not include Network Operating System software, create a maintenance partition using ExpressBuilder, before loading the operating system.

❑ Options ordered with your server are already installed. If you have additional adapter boards and devices for your server, install them before putting the server in the location you have selected. Follow the procedures in the *Upgrades and Options* chapter of the system User's Guide, plus installation inserts and vendor documents that came with the option.

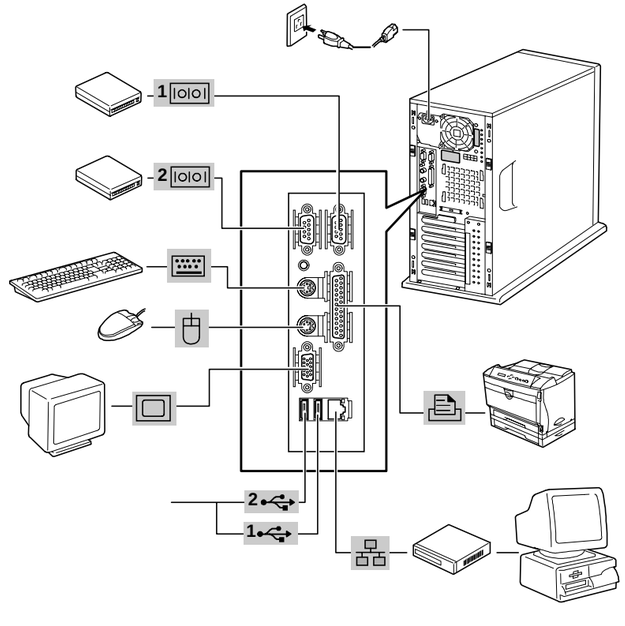

4 Running the EXPRESSBUILDER CD-ROM

❑ Run the **EXPRESSBUILDER** CD-ROM to:

- Ensure correct hardware setup if you installed additional adapter boards or devices in Step 3.
- Create driver diskettes needed during the installation of your Network Operating System (NOS), if your NOS was not factory-installed. **Note:** Always create a maintenance partition using ExpressBuilder, before loading the operating system.

❑ To run the **EXPRESSBUILDER** CD-ROM, insert the CD-ROM into the CD-ROM device, reboot the system and follow the screen prompts.

Note: If you received system diskettes with your server, these diskettes provide the latest available system utilities information. Use these diskettes instead of running the system utilities from the **EXPRESSBUILDER** CD-ROM.

5 Installing Application Software

❑ Locate application software media and accompanying installation procedures. Install application software following procedures in the applicable installation guide.

❑ If your Network Administrator advises, locate the **ESMPRO CD-ROM** and install your server management software.

Your server installation is now complete.

Need More Help?

Please call the Technical Support number included with the Service and Warranty information.

FCC DECLARATION OF CONFORMITY

TRADE NAME:	TYPE:
120Ee	EXP160

FCC RULES (Class B Equipment):

OPERATING ENVIRONMENT: For Home or Office use

FCC COMPLIANCE STATEMENT:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) ***This device may not cause harmful interference.***
(2) ***This device must accept any interference received, including interference that may cause undesired operation.***

INFORMATION TO USER:

The equipment listed in the above table has been tested and found to comply with the limit of the Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, If not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by on or more of the following measures:

1. Reorient / Relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on the circuit difference from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by NEC Solutions (America), Inc. could void the user's authority to operate the equipment.

Copyright © 2002 NEC Solutions (America), Inc.

Trademarks
Adobe and Acrobat are trademarks of Adobe Systems, Inc.
ESMPRO is a registered trademark of NEC Corporation.
Microsoft and Windows are registered trademarks of Microsoft Corporation.
Other product and company names are registered trademarks and trademarks of their respective holders.

PN: 455-01650-000 **May 2002**